
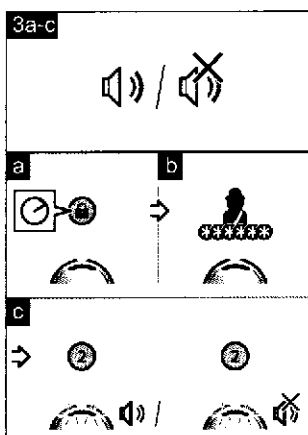
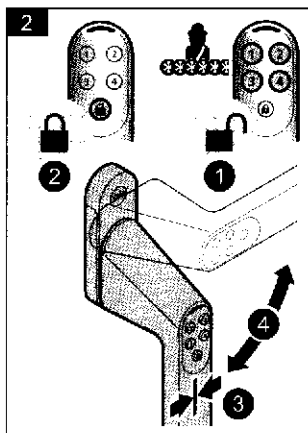


Operating instructions

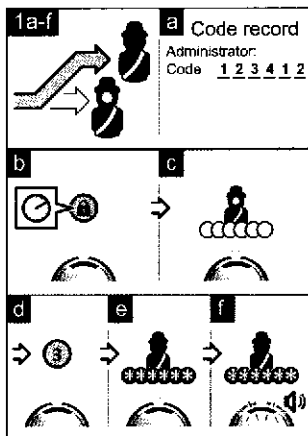

1. Change administrator code

All Code Handles are delivered with the same factory administrator code. For security reasons, always change the code before using the lock.

If the administrator code is lost, the handle cannot be re-programmed. It is therefore very important to store the code safely.

NOTE! The administrator code can also be used as a user code to unlock the handle.

The administrator code is used to add/erase user codes and to enable/disable the audio signal. When changing the administrator code, the handle will reset to factory settings (audio signal enabled and user codes erased).

- Write down the new administrator code before you start (6 digits).
- Hold the lock button pressed to enter programming mode. The LED turns steady green.
- Enter the existing administrator code (new handle: 123412). The LED turns steady green.
- Press button 3 to change the administrator code. The LED turns steady green.
- Enter the new administrator code (6 digits). The LED turns steady green.
- Re-enter the new administrator code. The new code is now set. The LED flashes green along with a long beep.
- Ensure that Code Handle works with the new code. Push the lock button to lock and use the new code to unlock.

Store your codes and this manual safely!

2. Operation -unlocking/locking

Once the Code handle has been programmed, the handle can be used.

- To unlock, enter a valid user code.
- To lock, press the lock button.
- Always check that the handle is locked after the lock button has been pressed.
- The handle must be in the 0°, 90° or 180° position for it to be locked or unlocked or else the handle will beep and LED flash red for 2 seconds.

3. / Activate/inactivate audio signal

Activate/inactivate audio signal

The code handle is delivered with the audio signal enabled. Do the following to turn the audio signal off/on:

- Hold the lock button pressed to enter programming mode. The LED turns steady green.
- Enter the administrator code. The LED turns steady green.
- Press button 2 to turn the audio signal off/on. The LED flashes green with a beep (audio signal on) or without a beep (audio signal off).